

Vinteck_{sas}

Di Guido Michetti & C.

10128 Torino Corso Vittorio Emanuele II, 123
Tel. + 39 - 339 7626891 fax + 39 - 011 - 547712
Laboratorio Via Limone 22 10141 Torino
Nr. Iscrizione RAEE IT08020000002500
(web) <http://www.vinteck.com>
(e-mail) info@vinteck.com

V-8

True-bypass MIDI switching Pedalboard



User manual
Ed. 01 rev. 0

Thank you very much for purchase of V-8 pedalboard.
 We really hope that it will be good friend for several ours of music. We ask you to write us by email at support@vinteck.com any problems or any ideas about hardware & software you think may be useful to us to built a better product. We are anytime available for any help you may need about how to use the V-UNO

Keep on rockin' (blues, jazz, latin, fusion....)

Guido Michetti

Contents

1	Instrument's marking	page	2
2	general warnings	page	3
3	instructions manual	page	3
4	technical description of V-UNO	page	4
5	installation and connections (wiring)	page	5
6	programming and MIDI manager	page	8
7	spare parts	page	10
8	warranty terms and conditions	page	10
9	support	page	10

1-instrument marking.

V-8 got in back side a little non removable area with serial and years of building. It is very important to report this information in case of need of technical supply.



2- general warnings

- o **please read the operator manual before starting the use of V-8 and follow the informations.**
- o **Maintenance must be operated ALWAYS with the instrument not connected to power supply**

V-8 is powered by an external 12 VDC 500mA. In no any case external power supply must be opened or disassembled.

In no any case the power plug and switch must be disassembled.

Vinteck declines all responsibility for damages to persons, animals and things caused by the non-observance of such a provision.

Warning

- Use of the machine by not properly trained staff.
- Improper use of the machine.
- Electric energy defects
- Repairing and changes made without authorisation.
- Use of not original or not specific for the model parts.
- Partial or total non-observance of the instructions.
- Use of the machine against national specific laws.
- Calamity and unusual events.

Remaining risk

Definition of remaining risk: “A danger not completely reducible from the designing and the safety devices, i.e. potential and not evident danger”.

Since the productive aiming, the mechanical qualities and the presupposed proper usage we didn't find any remaining risks, both during the design and the tests.

Anyway, we recommend:

- to let only trained staff using the machine;
- to check that the machine is supplied by an grounded single-phase electrical cable and the plug has an effective earth terminal.

3- instructions manual

3.1 This manual is addressed to following subjects:

- Owner;
- Operators.
- Technical builder

3.2 Aiming of details in I.M.

The manual contains a clear description of all technical specifications of the machine aimed at the transport, adjusting, maintenance, caution, location of remaining risks.

3.3 Using limits of I.M.

This manual can never replace an adequate experience of an operator and so it can only be a memorandum of the main operations. We specify, moreover. That I.M. mirrors the technical data at the moment of the purchase of the machine and that the manufacturer has the right to bring up-to-date I.M. and machines without conform I.M. and previous models.

3.4 How to keep this I.M.

The operating instruction manual has to be kept in perfect state and has to be always available for consultation. It has to follow the machine in case of transfer of property. It has to be kept until the demolition of the machine itself.

To order the up-to-date versions of I.M. and for any further information, please contact Vinteck sas or the nearest Vinteck sas dealer. We will be pleased to receive your suggestions to improve our quality.

Note for the use of this machine in a foreign country: contingent laws and restrictions in place for this kind of machine in the Country where it is used have to be respected also in the case are not mentioned in this manual.

New updated release of the manual will be available on www.vinteck.com

4- V-8 : technical description

True bypass system, working with silver golden relays.

8 programmable loops, plus 2 extra loops for amps send return connections or non automated effects.

It's possible to connect 5 pedals in front of amps and 3 in effects loops, or 6 and 2.

4 programmable switch completely independent from loops, for amps channel control.

Any combination between loops, switch and MIDI program change is possible.

Buffered input, with on/off switch. Max input level +4dB

Out tuner

10 banks of 8 programs, total of 80 programs.

Each bank may be deactivated (from 0 to 9)

Direct activation of loops may be done with button program/loop

MIDI manager with possibility of program change assign from 0 to 100 on all programs, independent from program number (MIDI MAPPING)

MIDI TAP TEMPO with external pedals, Control Change is assignable from 1 to 128.

MIDI channel manager input, output e 0/1 assignment.

MIDI IN and MIDI OUT with eco THRU (all incoming command comes send out as they are)

All programming operations may be done standing up.

2 digit Display

12 VDC not stabilized power supply, 500mA

Dimensions 33 x 12 cm. High 5,5 front, 6 cm back, staggered surface ad buttons positions, for easy access.

5- installation and connections (wiring)


All connection are on back side of V-8



Low, from left to right:

- BFR ON/OFF switch on or off the buffer on guitar buffer. Buffer must be switched off on case of signal higher than +4 dB . IN case of use of pre buffered signal, just test best solution for you ear.
- IN Guitar, or bass, input
- TUNER Direct output from guitar IN. May be used for tuner. Note: there is not any MUTE function.-
- IN TRUE True bypass input. Any signal may be inserted..
- LOOP1-5 loops managed from buttons 1 to 5
 - SND Signal for pedal input
 - RTN Signal back from pedal.
- EXT LOOP Fixed loop. Usable for always ON pedals (ex volume) or for amp effect loop connection. (see Example)
- LOOP6 loops managed from buttons 6
- EXT LOOP Fixed loop. Usable for always ON pedals (ex volume) or for amp effect loop connection. (see Example)
- LOOP7-8 loops managed from buttons 7 and 8
- OUT OUTPUT signal
- EXSW input for external switch, temporary switch must be used.
- S 1-2-3-4 NO contact (normally open). Close HOT on GROUND. For amps channel switching.
- MIDI IN/OUT IN and OUT MIDI socket
- DC IN Power supply input. Not less than 12 VDC, 500mA (450mA required when all loops/switch are active)

PEDALBOARD

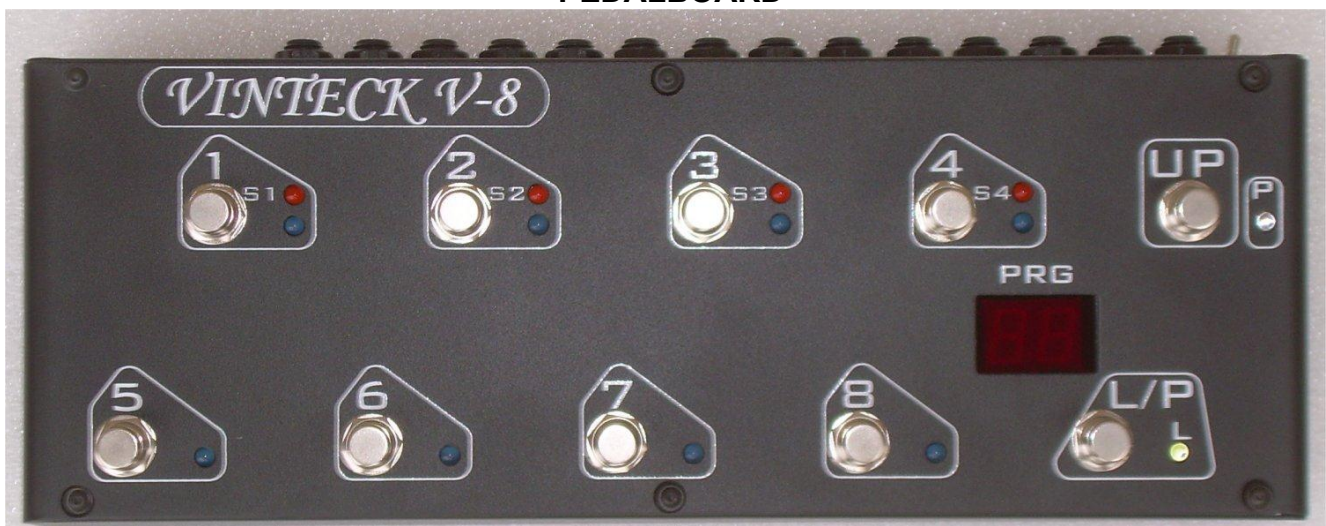

Leds show::

- 1-8 BLUE loops 1 to 8
- S 1-4 YELLOW switch on/off 1, 2, 3 end 4 .
- P WHITE. Show PROGRAM MODE ON (programs will be recalled)
- L – BLU. Show LOOP MODE ON (loops will be recalled)

WARNING:

The light of the LEDS is very intense to allow visibility even under intense stage lights.

To avoid the risk of glare do not look directly into the light.

Vinteck declines all responsibility for damages to persons, animals and things caused by the non-observance of such a provision

Button 1 - 8 may activate single loops or recalls programs, plus several MIDI

Button P/L make selection between LOOP e PROGRAMS, plus several MIDI functions

Button UP allows rotation of banks and selection of number od active banks, plus MIDI functions,

WIRING AND CONNECTIONS EXAMPLES

V-8 must be powered with original power supply only.

Insert the power supply cord in his plug. When powered the V-UNO is active.

WARNING : never cut the wire of 230/12VAC power supply.

Never open the V-8 power supply. 230VAC inside when connected to 230 V socket.


Vinteck sas do not have any responsibility in case of damage to people, animals or objects in case of non respect of this point. No warranty will be applied if power supply unit is disassembled or modified.

V-8 allows several way to connect to systems. You can see some example.

Note: examples are just examples, are not law. There are several possibilities to make good connections, just found the best for you sound!


Example 1.

8 stomps chain and out to amp.

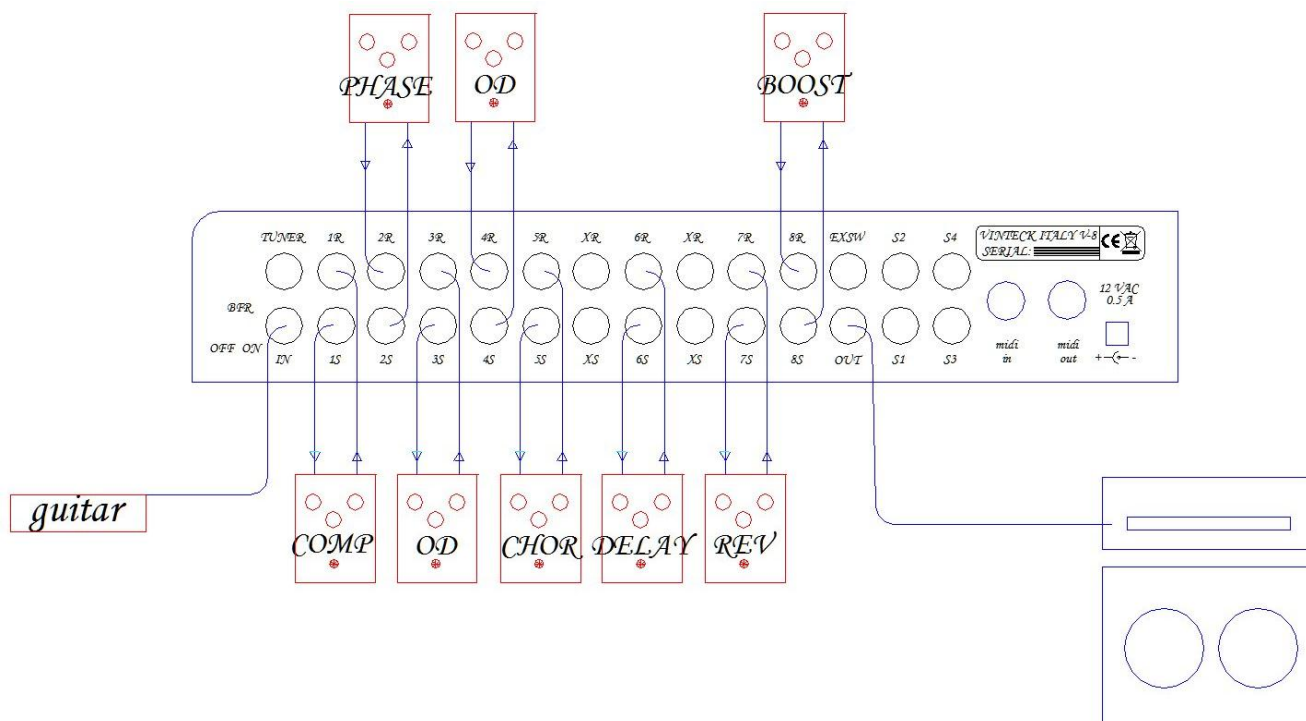

Example 2


V-8 with 6 pedals in front and 3 in send/return.

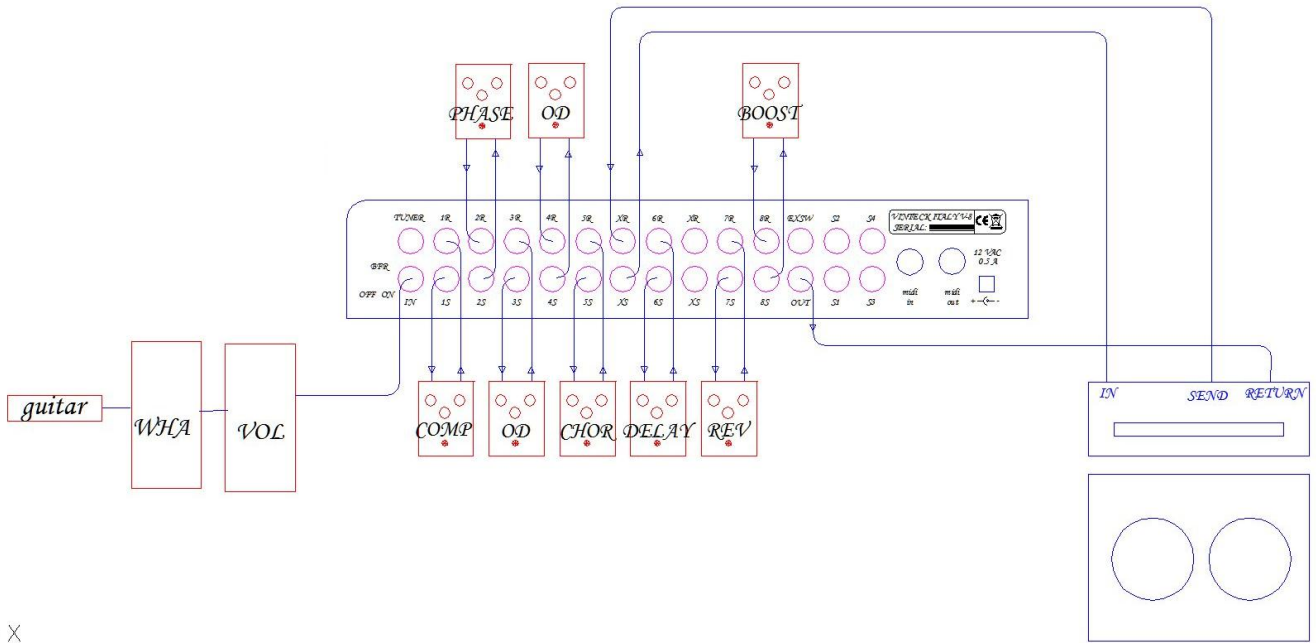

X

Example 3

V-8 with 6 pedals in front, 2 pedals in send/return and volume in send/return before delays

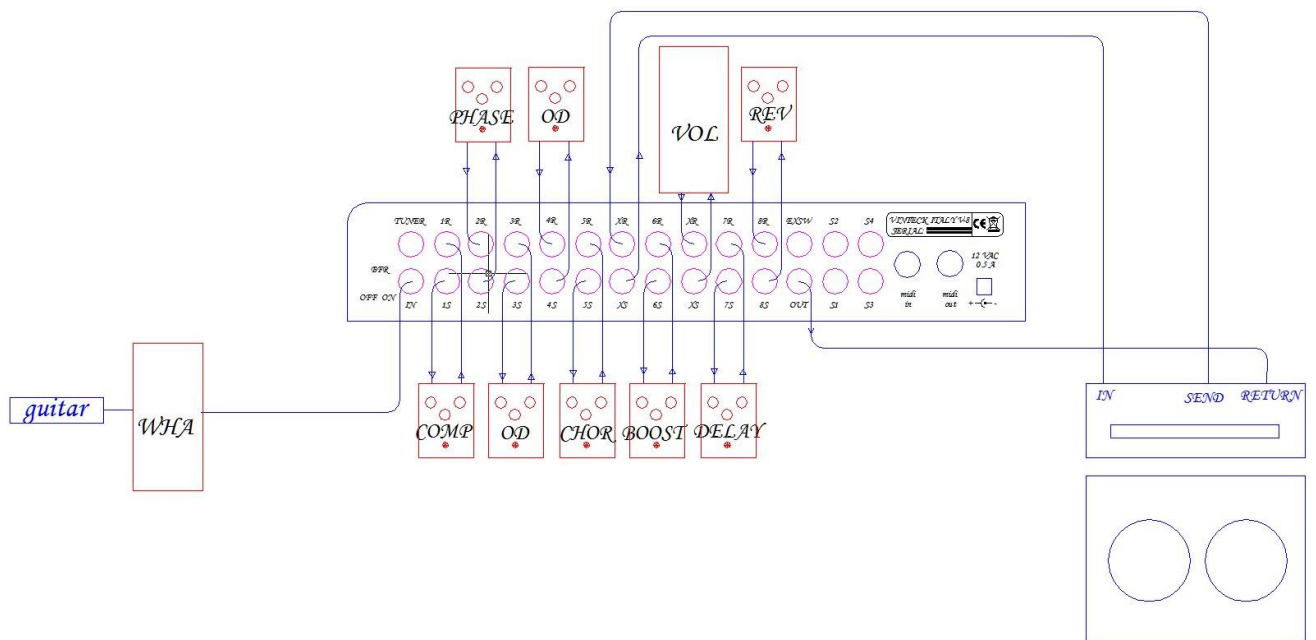

6 – PROGRAMMING AND MIDI MANAGER

BUTTON “L/P” AND BUTTON “UP”

L/P button

Make selection between LOOP and PROGRAM function of buttons 1 to 8

BLU led “L” ON button 1 to 8 make direct activation of loops

WHITE led ON button 1 to 8 recall programs

Other function:

Whit white led “P” on, keep pressed for 3 seconds enter in MIDI MAPPING menu.

UP button

Whith white led “P” on, make increments of banks, if banks are active.

Keep pressed for decrease.

Other function:

Whit BLUE led ON keep pressed to enter in “activation of bank” function

PATCH PROGRAMMING

Programs allowed are 80, 10 banks of 8 programs.

To program combinations loops (1-8) – switch (1-4)

Whit white led ON:

Keep pressed the button of program (ex. Nr. 3) for about 2.5 seconds.

Programming is active when white led start to blink

Press buttons of loops desired. Blue led show active loops.

Keep pressed buttons 1-4 for about 2.5 secs to activate switches. Yellow led indicate switches ON.

Confirm and memorize programs pressing L/P button.

BANKS ACTIVATION

Factory preset comes with bans 1-9 not active. Only bank 0 is active.

To activate banks 1-9 .

With blue led “L” press and keep for about 4 secs button UP

Display shows b0 (bank zero)

Press UP to increase bank. Press button “L/P” to activate bank.

Active banks show on display the DOT.

Banks may be activated without sequence. (ex. Banks 0, 4 and 7 active).

Following display show T0, T1, T2, T3. This is a function not active on V-8

To exit and confirm press button 8.

MIDI SETTINGS

INPUT CHANNEL

Press buttons 1 and 5 together, keep pressed 3 secs.

Display blinks between IN and a number from 00 to 16.

00 is OMNI, 1 to 16 is channel selection of input.

Choose with buttons UP and L/P (as DOWN) , then confirm and exit with button 8.

OUTPUT CHANNEL

Press buttons 2 and 6 together, keep pressed 3 secs.

Display blinks between OT (as OUT) and a number from 1 to 16.

1 to 16 is channel selection of output

Choose with buttons UP and L/P (as DOWN) , then confirm and exit with button 8.

Reference number 0-127 or 1/128

Press buttons 3 and 7 together, keep pressed 3 secs.

Display blinks between CH, and a number from 0 to 1

Choose with button UP and L/P (as down).

Effettuare la selezione con pulsanti UP e L/P (down).

Confirm and exit with button 8.

EXTERNAL BUTTONS FOR CONTROL CHANGE (MIDI TAP TEMPO)

With an external temporary Normally Open buttons it is possible to manage and send a Control Change command via MIDI.

To set the CONTROL CHANGE value:

Press buttons 4 and 8 together, keep pressed 3 secs

Display blinks between CC, and a number from 0 to 99 then 0.0. to 2.8 for values from 100 to 128.

Choose value with buttons UP and L/P (as down) .

Preset values is CC #80 . On some devices this the preset as well. Check on users manual the right CC values.

Confirm and exit with button 8.

PROGRAM CHANGE MIDI MAPPING.

V-8 allows to assign a PROGRAM CHANGE number difference from program number.

Factory preset got same number.

To change number:

Posizione V-8 con program (1 to 99)

NOTE: It's important to remember the number of program you're working.

With white led "P" ON press L/P and keep pressed for 3 secs.

Display show a blinking number, which is the number of Program Change.

Use UP and L/P (as down) to define the new program change number.

Confirm and exit with button 8

FACTORY RESET

On V-8 it's possible to return to beginning default settings.

To make Factory reset:

Shot down power supply, removing power supply cord

Press buttons 1 and 5 together, keep pressed and reinsert power supply.

Display show "ii" , as Initialization

Release buttons.

Note: Factory reset is not reversible.

7- Spare parts

Codice	descrizione
TB10S7	button
TB10BF	Buffer integrated chip
VUNOPS	External power supply

8- Warranty terms

V-8 is covered of total warranty of 2 (two) years from purchase.

Warranty operation will be performed only at Vinteck factory in Torino Italy.

Shipping cost are charged to customers

All operation and any spare parts are covered by warranty.

Warranty do not cover the following cases:

- Uncured utilization
- Damage from transportations
- Repairing and changes made without authorization
- Atmospheric Events
- Incorrect use of instruments
- Power supply not correct
- Use of not original spare parts
- Partial or total non-observance of the instructions;
- Use of the machine against national specific laws.;
- Calamity and unusual events.

10 support

Any information about “how to use” or any technical problems may be send by email to:

support@vinteck.com

or to

info@vinteck.com

DECLARATION OF CONFORMITY

Application of Council Directive(s):	89/336/EEC and 93/68/EEC
Standard(s) to which Conformity is Declared	EN 55103-1, EN 55103-2 and 60062: 1998
Manufacturer	Vinteck SAS di Guido Michetti & C. Corso Vittorio Emanuele II, 123 10128 Torino – ITALY The equipment identified here conforms to the Directive(s) and Standards specified above
Type of equipment	Effects switching system
Model	TB10MKII – TB5 V-UNO V-8
Data	september 2007

Vinteck sas
di Guido Michetti & C.
corso Vittorio Emanuele II 123
10128 Torino Italy